



DOOR FRAME

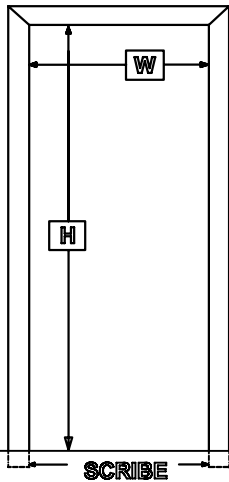


Rough Opening Width = $W + 1\ 1/2"$
 Rough Opening Height = $H + 3/4"$

DOOR FRAME / SIDELIGHT

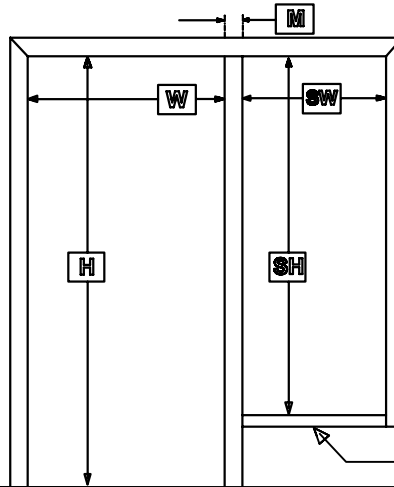

Rough Opening Width = $W + M + SW + 1\ 1/2"$
 Rough Opening Height @ Door = $H + 3/4"$
 Rough Opening Height @ Side Lite = $SH + 1\ 1/2"$


BORROWED LIGHT

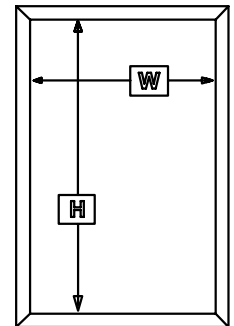

Rough Opening Width = $W + 1\ 1/2"$
 Rough Opening Height = $H + 1\ 1/2"$

M Size Varies (M=2" with 1" & 2" trim, M=1-1/2" with 1-1/2" trim)

SWING

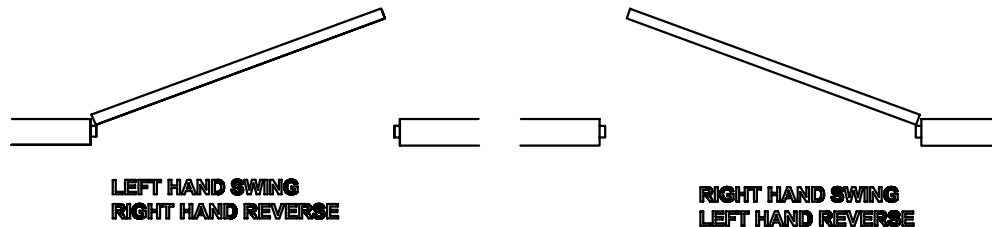

ROUGH OPENING



ABS - Architectural Components
 8401 Rovana Cir. Sacramento CA. 95828
 Toll Free Number: (888) 888-2161
 Phone Main: (916) 388-2161
 Fax: (916) 388-8338